 




PANIC TRANSMITTER USER'S INSTRUCTIONS (Model PT-434)

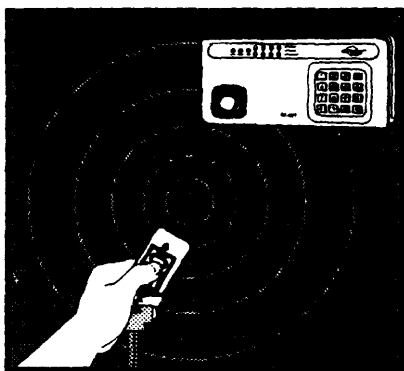

Introduction

The Panic Transmitter conveniently fits on any key-chain or necklace. It allows you to activate Skylink's receivers (Secuftiy Control Panel **SC-001**, **SC-002**, Emergency Dialer **AD-433**, Audio Alarm **AA-433**, Silent Alarm **SW-433**) from a maximum distance of approximately 100 feet from the receiver. This transmitter is water resistant and shock resistant, it allows you to carry this transmitter all the time.

Program the Panic Transmitter to the Security Control Panel (SC-001, SC-002)

 
 
1. Enter the current **MPIN** (Master Personal Identification Number) on the SC-001, SC-002.
2. Press [B].
3. Press the number key to identify which zone to add the panic transmitter to. Do not program the transmitter to zone 1,2,3,4. The panic transmitter is designed to be programmed in zone 5 for SC-001 and zone 9 for SC-002. Therefore, press [5] for SC-001 and press [9] for SC-002.
4. The zone light(s) will flash for eight seconds.
5. While the zone light(s) are flashing, press [*]. Now both the green and red lights flash for 30 seconds.
6. While the zone lights are flashing, activate the panic transmitter by pressing the button on the transmitter. The red LED light of the sensor will flash. You will hear a long beep from the control panel, the zone light will stop flashing and the panic transmitter will now communicate to that zone.

Battery

The Panic Transmitter operates on three 3-volt **lithium** batteries that are installed at the factory. The battery life of these lithium batteries is approximately three years. There are two screws on the back of the transmitter that hold the top and bottom case together. Recommendation: Test your transmitter periodically to ensure that all the batteries are working.

To replace the Panic Transmitter batteries:

1. Undo the two screws on the back of the transmitter. The bottom case will then come off.
2. Take out all the old batteries using a small screwdriver or a pen.
3. Place the new batteries in position. The positive end should be facing upward as you place the batteries in the transmitter (refer to diagram)
4. Close the battery cover and reinsert two screws.

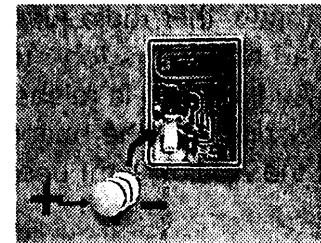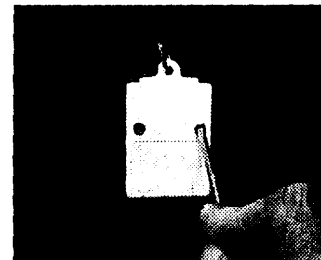


Program the Panic Transmitter to the Emergency Dialer (AD-433, AD-002)

1. Press [L], [5] when in clock mode, the display will show "L5 I d codE".
2. Activate the panic transmitter within 5 seconds by pressing the button on the transmitter. The red LED light of the transmitter will be on when the button is pressed. The display will return to clock mode once the panic transmitter has been learned.
3. If the button of the panic transmitter is pressed, it will trigger the Emergency Dialer and start dialing the preset phone numbers (refer to AD-433, AD-002 User's Instruction for details).

Operation

In an emergency, you can activate the Skylink receivers using the Panic Transmitter. Move the sliding cover and press the panic button for one second. This will activate the "learned" Skylink receiver(s).

 Note: Make sure you press down on the transmitter for one full second or the system may not respond.

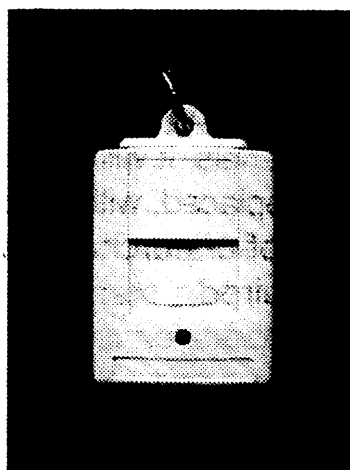

FCC

The Remote Control is approved by the FCC and it complies with Part 15 of the FCC Rules. Its operation is subject to the following two conditions :

1. This device may not cause harmful interference.
2. This device must accept any interference that may cause undesired operation.

WARNING:

Changes or modification³ to this unit not expressly approved by the party responsible of compliance could void the user's authority to operate the equipment.